



# MP60 MP3 Player&Recorder User manual

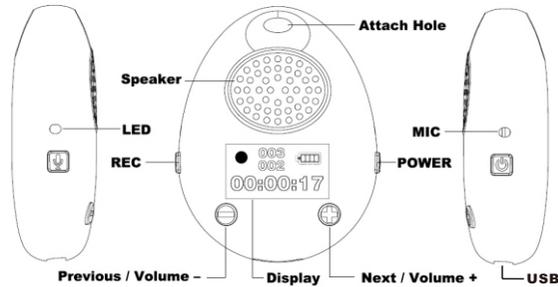

1. Power Button
2. REC Button
3. Key "+": Next / Volume +
4. Key "-": Previous / Volume -
5. LED light
6. Speaker
7. USB

**Power ON:** Hold down the Power Button until the screen turn on, go to system menu interface: First display REC menu(see the right diagram) press "KEY +" and "KEY-" to change the menu for different function, there are total 6 menu for different function, below is function overview:

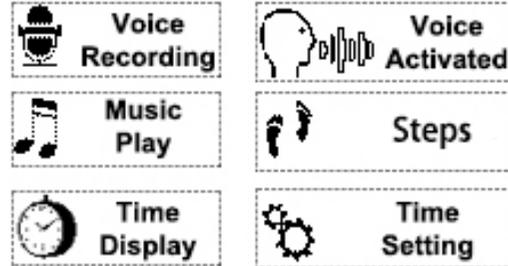

1. Voice recording
2. Voice Activated
3. Music Play
4. Steps
5. Time Display
6. Time Setting

**Power OFF:** press and hold the power button for 5 seconds, the screen will display "BYE BYE" then power off(effective in any mode).

- 1. Voice Recording:** when the screen display , press the "REC" Button goto voice recording interface, the screen display , press key save and quit voice recording function, goto menu interface.
- 2. Voice Activated:** when the screen display , press the "REC" Button goto voice recording interface, the screen display , press key save and quit voice Activated function, goto menu interface.
- 3. Music Play:** when the screen display , press the "REC" Button goto music play interface, the screen display , system go to music pause mode, press the "REC" Button , system start playing music, display interface, at this time short press button to increase or decrease the voice volume, press and hold the key for next or Previous music, during music play mode, short press "REC" button , system will pause music play, press again to play; System will first play the root folder file, the recorded voice file is saved in "RECORD" folder, if you need play recorded voice please press and hold "REC"button

for 5 seconds, system will display , then display , short press again, system will play recorded voice file, if need change to play music file, please hold and press the "REC" button again to change;

**4.Steps:** when the screen display ,press the "REC" Button goto steps recording interface, the screen display , the top column is walk steps, the second column is distance, the third column is calories, press "REC"button to pause, display , press again to start, at this interface, short press the "KEY+" button go to setting interface, the screen display , the first 170 is for high, second 050 is for weight, third 050 is for step distance, press the button , to change the value, short press "REC"button to next in cycle, press and hold "REC"button to save the setting and quit to previous interface, short press power button to quit without save.

at steps interface short press power button to quit to

menu interface.

- 5. Time Display:** when the screen display ,press the "REC" Button goto time display interface ,press power button to quit to menu interface.
- 6. Time Setting:** when the screen display , press the "REC" Button goto time setting interface , first flashing "2018", short press button to change the value, short press "REC" Button to next until it finished then goto root menu, press power button just quit to menu interface without save.

## Connect to the computer:

Press the power button to OFF and connect it to your computer using the USB cable provided. The computer will pop up a removable disk logo, Open it up and there will be files for WAV and set time, select the files you want and copy and paste them to your computer.



**To disconnect:** click "safely remove device" from your computer and unplug the USB.

## Charging the voice recorder:

Connect the voice recorder to a USB port with the cable provided, the blue LED light will turn on, when the battery is fully charged, the red LED light turn on.

## Troubleshooting:

When the battery is insufficient, the red & blue light will flash alternately for about 5 seconds, then it will automatically save the current files and shut down.

If the audio recorder stop responding due to improper operation or other unexpected reason, please press and hold the power button, it will turn off for reset.

When the storage space is insufficient, the red & blue light will flash alternately for about 5 seconds, then it will automatically save the current files and shut down. If you want to continue to use this voice recorder, copy the necessary files to the computer and delete the old documents in storage in order to free up enough storage space.

Parameters	Parameters
Rate	Mp3: 8KHz – 48KHz 8Kbps – 320Kbps 32KHz – 48KHz 48Kbps – 192Kbps
WMA	32KHz – 48KHz 48Kbps – 192Kbps
Memory	4GB – 16GB(optional) / Nand Flash
Battery	High-capacity lithium polymer
Charging Volt	DC-5V
Interface type	Micro USB
Supporting system	Windows me/2000/xp/2003/vista/win7/wi n8,Mac 10.4, Linux

## Warning:

**Application:** Please strictly abide relevant regulations and laws. This product should not be used for any illegal purposes. The user is fully responsible for its use.

**Battery:** If this product has not been used in a long period of time, you will need to fully charge it before using.

**Operating temperature:** 0 – 40 degree.

**Operating humidity:** 20% - 80%, this product is not waterproof so don not get it wet or use it in a humid environment.

**Other matters:** Do not use this product in strong magnetic or strong electric powered environments.