


Voice Recorder User manual

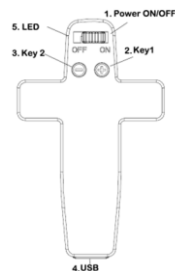

1. Power ON/OFF
2. KEY1: Next / Volume +
3. Key2: Previous / Volume -
4. USB
5. LED light

Functions:

.ON & Recording: Turn the power switch to ON side, the blue & red indicator light appears 3 seconds then turn off, the indicator light flash blue 3 times then turn off, the device start voice recording.

.Playback: Power off the voice recorder and plug the USB earphone to the voice recorder USB port. Power on the voice recorder, System change to playback mode.



1: Press KEY1 one time to volume up, press KEY1 for 3 seconds for next.

2: Press KEY2 one time to volume down, press KEY2 for 3 seconds for previous. Unplug the USB earphone, the system change to recording mode

OFF: Turn the power switch at off side, the indicator light flash blue one second then off. The system will save file and power off.

Charging the voice recorder:

Connect the voice recorder to a USB port with the cable provided, the blue LED light will turn on, when the battery is fully charged, the red LED light turn on.

Connect to the computer:

Turn the voice recorder power OFF and connect it to your computer using the USB cable provided.



The computer will pop up a removable disk logo, Open it up and there will be files for WAV and set time, select the files you want and copy and paste them to your computer.

3. To disconnect, click "safely remove device' from your computer and unplug the USB.

Setup time:

Connect to a computer to set the time on the product, open the set time folder, double click "SetTime.exe" file, it will pop a window to show current time, click "Set Time" button to save it.

Troubleshooting:

When the storage space is insufficient, the red & blue light will flash alternately for about 5 seconds, then it will automatically save the current files and shut down.

If you want to continue to use this voice recorder, copy the necessary files to the computer and delete the old documents in storage in order to free up enough storage space.

When the battery is insufficient, the red & blue light will flash alternately for about 5 seconds, then it will automatically save the current files and shut down.

If the audio recorder stop responding due to improper operation or other unexpected reason, please turn the power switch off, and turn on for reset.

HIÖ	Parameters
Rate	Mp3: 8KHz – 48KHz 8Kbps – 320Kbps 32KHz – 48KHz 48Kbps – 192Kbps
WMA	32KHz – 48KHz 48Kbps – 192Kbps
Memory	4GB – 16GB(optional) / Nand Flash
Battery	High-capacity lithium polymer
Charging Volt	DC-5V
Interface type	Micro USB
Supporting system	Windows me/2000/xp/2003/vista/win7/wi n8,Mac 10.4, Linux

Warning:

Application: Please strictly abide relevant regulations and laws. This product should not be used for any illegal purposes. The user is fully responsible for its use.

Battery: If this product has not been used in a long period of time, you will need to fully charge it before using.

Audio quality: This product is not a professional audio recording device.

Operating temperature: 0 – 40 degree.

Operating humidity: 20% - 80%, this product is not waterproof so don not get it wet or use it in a humid environment.

Other matters: Do not use this product in strong magnetic or strong electric powered environments.