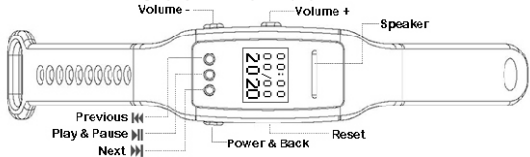






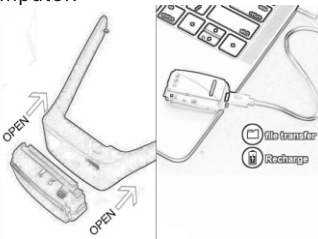


<div><div>Smart Watch Voice Recorder</div><div>User Manual</div><div></div><div><div>Key functions</div><div>Power on/off & back key: power on, power off, back</div><div>Volume + key: increase voice volume</div><div>Volume - key: decrease voice volume</div><div>Play & Pause key: confirm, play, pause, quick goto voice recording</div><div>Previous key: previous sound, menu left or up</div><div>Next key: next sound, menu right or down</div><div>Reset: use pin object press to restart system</div></div><div><div>Power on:</div><div>press and hold the "Play&Pause" key for few seconds, system goto menu interface, first time power on the device will goto select language menu, please select your own language, press the "Play&Pause" key goto main menu interface.</div></div></div>	<div><div>Power off:</div><div>when the recorder power on status, press and hold the "Power on/off" key for 5 seconds, the screen will display "1 2 3", then display "GOODBYE", system power off</div><div>Note: the system will power off automatically when no operates over one minutes, the time be config on setting menu.</div><div>Main menu</div><div>this interface has Record, Music Play, Folder and Setting menu, the screen only display one menu, press the "Previous", "Next" key to change menu, and press the "Play&Pause" key enter to selected submenu.</div><div><div>Recording</div><div>Music</div><div>Folder</div><div>Setting</div></div><div><div>Note:</div><div>all the menu operates are same, press the "Previous" or "Next" key to select the menu, press the "Play&Pause" key to confirm the selected, press the "Power On/Off" key to return back to previous menu.</div></div><div><div>Record</div><div>Select record menu, press the "Play&Pause" key goto record menu</div></div></div>	<div><div>Recording menu</div><div>Start voice recording</div><div>Recordings library</div><div>Record Settings</div><div>press the "Previous" or "Next" key to select the 3 menu, when it selected, the menu will highlight display.</div></div> <div><div>Voice Recording</div><div>selected the "Start voice recording" menu, press the "Play&Pause" key goto voice recording interface, the red LED light will flash 5 times, system start voice recording, refer the right diagram:</div><div></div><div>the middle strength bar will change to small or big when the environmental sound changes, the numeral 00:00:50 means the recorded time, "017:49:30" means the remain records time, the battery symbol shows remaining power, the screen will display clock interface after 30 seconds, and turn off in 20 seconds, press the "Power On/Off" key to display again.</div><div>On the recording interface, press the "Play&Pause" key to pause recording, press again to start, press the</div></div>	<div><div>"Power On/Off" key to quit recording, system will display "saved", then system goto record list menu.</div><div>Quickly start voice recording: on the main menu, press and hold the "Play&Pause" key for 5 seconds, system goto voice recording interface, start voice recording.</div><div>Recordings library</div><div>selected the "Recordings library" menu, press the "Play&Pause" key goto recordings library interface, press the "Previous" or "Next" key to select recorded files, the files name will highlight display when selected, press the "Play&Pause" key goto play interface, start play this sound.</div><div>Record Settings</div><div>selected the "Record Settings" menu, press the "Play&Pause" key goto setting interface, it will display the following menu, only display two menu on screen, press the "Previous" or "Next" key to change.</div><div>Record Format</div><div>Set rec bitrate</div><div>Track AVR mode</div><div>Set recording scene</div><div>Monitor Switch</div><div>LED on/off</div><div>Timer Recording</div></div>	<div><div>Record Format:</div><div>WAV or MP3 for select</div><div>Set REC bit rate: 256kbps,523kbps,1536kbps for select</div><div>Track AVR mode: Normal or AVR mode for select, AVR mode is voice activated mode, when voice activated is on, the voice recording interface show as right diagram:</div><div></div><div>Set recording scene: normal scene, meeting scene, train scene, long range scene for select</div><div>Monitor Switch: Open or Close for select</div><div>LED On/Off: OFF or ON for select, control the recording red LED light on or off.</div><div>Timed Recording: OFF or ON for select to enable or disable this function, set recording cycle, start time and end time</div><div>Music</div><div>goto music menu, system will display submenu: "All songs" press the "Play&Pause" key goto song list, if system do not have songs, the screen will display "No songs found", go back to main menu.</div><div>press the "Previous" or "Next" key to select a song,</div></div>	<div><div>press the "Play&Pause" key goto play interface, refer the right diagram: the numeral "202009152" is file name, "00:00:00" is played time, "002/007" is shows the playing the third sound and the total files is 7.</div><div>During play mode, press the "Play&Pause" key to pause, please refer the right diagram:</div><div>Press again to play, press the "Vol+", "Vol-" key to adjust the sound volume,</div><div>press the "Previous" or "Next" key to change previous or next sound, press and hold the "Previous" or "Next" key for rewind or fast forward; press the "Power On/Off" key to quit to up level menu.</div><div>This device built internal speaker, do not support output to earphone.</div></div> <div><div>003</div><div>007</div><div>202009152</div><div>00:00:00</div></div> <div><div>003</div><div>007</div><div>202009152</div><div>00:00:00</div></div> <div><div>During play mode, press and hold the "Play&Pause" key goto play menu:</div><div>1. Play mode: has 4 options for select</div><div>a. Repeat one</div><div>b. Repeat all</div><div>c. Random</div><div>d. View Playing</div></div>
<div><div>2. Repeat Setting:</div><div>has 3 submenu to settings</div><div>a. Repeat Mode</div><div>b. Repeat Times</div><div>c. Repeat Interval</div></div> <div><div>3. Equalizer:</div><div>has following options for select</div><div>off, Rock, Funk, Hip hop, Jazz, Classical, Techno</div></div> <div><div>4. Variable speed playing:</div><div>press "Vol+", "Vol-" to adjust the rate, the value range is 1 - 8</div></div> <div><div>5. Bookmarks:</div><div>has following menu for select</div><div>a. Add bookmark</div><div>b. Go to bookmark</div><div>c. Delete bookmark</div></div> <div><div>6. Delete:</div><div>delete this songs,screen will display "YES" or "NO" for select, press the "Previous" or "Next" key to select, press the "Play&Pause" key to confirm.</div></div> <div><div>7. Delete All:</div><div>delete all the files, screen will display "YES" or "NO" for select, press the "Previous" or "Next" key to select, press the "Play&Pause" key to confirm.</div></div> <div><div>8. Exit:</div><div>exit the menu, go back to up level menu</div></div>	<div><div>Folder</div><div>select Folder menu, press the "Play&Pause" key goto folder menu,</div><div>system display the "RECORD" folder and music files(if no music files, only display "RECORD" folder),select "RECORD" folder, press the "Play&Pause" key goto submenu, all recorded sounds are store in this folder, select a file press the "Play&Pause" key to play.</div></div> <div><div>Setting</div><div>Selected the Setting menu, press the "Play&Pause" key goto setting submenu, system display setting interface, refer the right diagram:</div></div> <div><div>Date and time</div><div>Language/Language</div><div>Power off</div><div>Sleep timer</div><div>Display Setting</div><div>Password Set</div><div>Tools</div><div>Information</div><div>Format device</div><div>Factory reset</div></div>	<div><div>1. Date and time:</div><div>a. Time settings: Set time format: select the format: "12-hours" or "24-hours", Set time: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set hours and minutes</div><div>b. Date settings: Set date format: select the format "DD MM YYYY", "MM DD YYYY" or "YYYY MM DD", Set date: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set "YYYY", "MM" and "DD", "YYYY" for year, "MM" for month, "DD" for day.</div></div> <div><div>2. Language/Language:</div><div>system offers 25 language for select, please choice your own language and press the "Play&Pause" key to confirm.</div></div> <div><div>3. Power off:</div><div>press the "Vol+", "Vol-" key to adjust the value, the value support 1 to 30 minutes</div></div> <div><div>4. Sleep timer:</div><div>you can select shut down sleep or set sleep time,press the "Vol+", "Vol-" key to adjust the value, the value support 1 to 99 minutes</div></div> <div><div>5. Display Setting:</div><div>a. Brightness: press the "Vol+", "Vol-" key to adjust the brightness</div><div>b. Backlight timer: select 5s,10s,15s,20s,30s or always on</div></div>	<div><div>c. Screensaver:</div><div>select None or Digital clock, when you selected Digital clock, when the device no operate over 30 seconds will display the digital clock, refer the right diagram: press any key to quit this mode.</div><div>6. Password Set:</div><div>a. Password Switch: select Password Off or Password On</div><div>b. Password Set: system go set password interface, refer the right diagram: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set password ground 1,2,3, press the "Play&Pause" key to confirm.</div><div>Note: once the password set, every time open the device or connect to computer must input password, the operate is same as above.</div><div>7. Tools:</div><div>Alarm:</div><div>Alarm on/off: set alarm off or alarm on</div><div>Alarm time: set alarm hours and minutes</div><div>Alarm cycle: set alarm Once, Daily or Work Day</div><div>Alarm music: set Ring embedded or Music in flash</div><div>Alarm volume: press the "Vol+, Vol-" key to adjust volume</div></div> <div><div>00:00</div><div>00/00</div><div>2020</div></div>	<div><div>8. Information:</div><div>system display player information or disk space</div></div> <div><div>9. Format device:</div><div>system display "YES" or "NO" to confirm format the device</div></div> <div><div>10. Factory settings:</div><div>system display "YES" or "NO" to confirm to return to factory default mode, you may lost all the recorded data.</div></div> <div><div>Connect with computer</div><div>connect it via USB cable to computer's USB port, the device screen will display charge & transfer or charge & play, select charge & transfer press the "Play&Pause" key, the computer will pop up a removable disk logo, Open it up and there will be files for music(if copied) files and "RECORD" folder, select the files you want and copy and paste them to your computer.</div><div>To disconnect, click "safe remove device" from your computer and unplug the</div></div> <div><div>Charging the recorder</div><div>Connect the voice recorder to a USB port (PC or Cell Phone Charger) with the cable</div></div> <div><div></div></div>	<div><div>provided, the device screen charging symbol will display charging status. required the charger specification:</div><div>Input: AC110-240V 50/60Hz 100mA</div><div>Output: DC5.0-5.5V 500mA-1A</div></div> <div><div>Troubleshooting:</div><div>When the battery is low, the battery status symbol will display real time, you need charging it.</div><div>If the device stop responding due to improper operation or other unexpected reason, please press and hold the "Power on/off" key for 15 seconds, system will restart.</div></div> <div><div>Warning:</div><div>Battery: If this product has not been used in a long period of time, you will need to fully charge it before using.</div><div>Audio quality: This product is not a professional audio recording device. Operating temperature: 0 – 40 degree.</div><div>Operating humidity: 20% - 80%, this product is not waterproof so don not get it wet or use it in a humid environment.</div><div>Other matters: Do not use this product in strong magnetic or strong electric powered environments.</div></div>