 


Smart Watch User Manual VR610

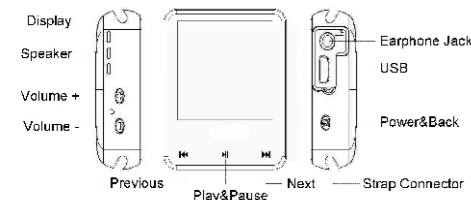

 
Keys Function:

Power & Back: Power ON, Power off, Back
Volume +: Increase volume, menu up
Volume -: Decrease volume, menu down
Play & Pause: Confirm, play, pause, quickly start voice recording
Previous: Previous, Rewind, menu left or up
Next: Next, Fast forward, menu right or next
Reset: Press to restart system
Power On: Press & Hold the "Power On/Off" key for 5 seconds, system goto menu mode (the first time power on the device, goto select language interface, after your chose language, then goto main menu interface.

Power Off: when the device is power on, press and hold the "Power On/Off" key, the screen will display "1 2 3", and display "GOODBYE", system power off, note: the system will power off automatically when no operates over one minutes, the time be config on setting menu.

Main Menu

the system main menu have "Record, Music, Folder View, FM Radio, E-Book and Setting menu, press the "Previous" or "Next" key to select the menu, it will highlight display when it selected, press the "Play&Pause" key goto submenu

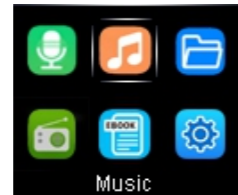

Note: all the menu operates are same, press the "Previous" or "Next" key to select the menu, press the "Play&Pause" key to confirm the selected, press the "Power On/Off" key to return back to previous menu.

Voice Record

Goto voice record menu, the screen display below interface:

RECORD

 
Start voice recording Recordings library Record Settings

press the "Previous" or "Next" key to select the 6 menu, when it selected the menu will highlight display.

Voice recording

selected the "Start voice recording" menu, press the "Play&Pause" key goto voice recording interface, refer the right diagram:

the middle strength bar will change to small or big when the environmental sound changes, the numeral "00:12:30" means the recorded time, "036:13:18" means the remain records time, the battery symbol shows remaining power, the screen will display clock interface after 30 seconds, and turn off in 20 seconds, press the "Power On/Off" key to display again.

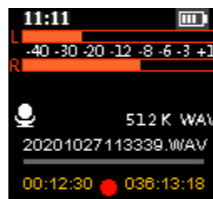

On the recording interface, press the "Play&Pause" key to pause recording, press again to start, press the "Power On/Off" key to quit recording, system will display the interface "YES" or "NO" for select, select "YES" for save the records file, "NO" for quit without save, the system goto up level menu.

 
Quickly start voice recording: on the main menu, press and hold the "Play&Pause" key for 5 seconds, system goto voice recording interface, start voice recording.

Recordings library

selected the "Recordings library" menu, press the "Play&Pause" key goto recordings library interface, press the "Previous" or "Next" key to select recorded files, the files name will highlight display when selected, press the "Play&Pause" key goto play interface, start play this sound.

Record Settings

selected the "Record Settings" menu, press the "Play&Pause" key goto setting interface, refer the right diagram:

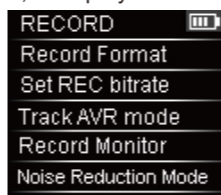

1. Record Format: has options "WAV", "MP3" for select
2. Set REC bit rate: has options "512kbps", "768kbps", "1024kbps", "1536kbps" for select
3. Track AVR mode:
a. VOR ON/OFF: set to Normal, the recorder is work as continue recording mode, set to VOR ON, the recorder is works as voice activated mode.
b. VOR Sensitivity: has options "level 1 to level 6" for select When Voice Activated is on, the voice recording interface show as right diagram:
4. Record Monitor: OFF or ON for select
5. Noise Reduction Mode: OFF or ON for select
6. Record Divide: press "Vol+", "Vol-" key to change the divide time, the value is from 0 to 300 minutes, system will automatical save a file according your settings, if setting is 0, system will save the whole records in a file.
7. Timer Recording: OFF or ON for select, setting recording cycle, set start time and end time
8. Input Gain Setting: set the input sound sensitive level, level 1 to level 7 for select, we suggest level 3 is enough for records.



Music

 
goto music menu, system will display submenu: "All songs, Artists, Albums, Genres, Directory_listing, Record File, Playlist, Create Playlist", select a menu press the "Play&Pause" key goto corresponding setting, when selected a sound, press the "Play&Pause" key goto play interface, refer the right diagram: the numeral "2020102700339.wav" is file name, "00:01:50" is played time, "00:04:55" is total time of the sound, "002/0017" is shows the playing the second sound and the total files is 17.
During play mode, press the "Play&Pause" key to pause, please refer the right diagram:
Press again to play, press the "Vol+", "Vol-" key to adjust the sound volume, press the "Previous" or "Next" key to change previous or next sound, press and hold the "Previous" or "Next" key for rewind or fast forward; press the "Power On/Off" key to quit to up level menu.
This device built internal speaker, also support 3.5 plug earphone, when insert earphone then the sound will goto earphone.



During play mode, press and hold the Play&Pause" key goto play menu:

1. Play mode:

a. Repeat: Set Repeat off, Repeat 1, Repeat all or preview mode
b. Shuffle: Set shuffle to Off or On
c. Repeat settings: set Repeat Mode, Replay Times and Replay Interval settings.

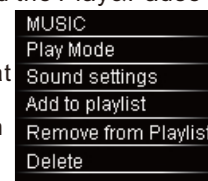

2. Sound Setting:

a. Equalizer: has options "off", "Rock", "Funk", "Hip hop", "Jazz", "Classical", "Techno", "Custom" for select.
b. Variable Speed Playback: press "Vol+", "Vol-" key to adjust the value.
3. Add to playlist: add the sound to playlist, you can select playlist [1] to [3] to add
4. Remove form playlist: remove the sound from playlist [1] to [3]
5. Delete: delete the sound, select "YES" or "NO" to confirm.

Troubleshooting:

When the battery is low, the battery status symbol will display real time, you need charging it.
If the device stop responding due to improper operation or other unexpected reason, please press and hold the "Power on/off" key for 15 seconds, system will restart.

Warning:

Battery: If this product has not been used in a long period of time, you will need to fully charge it before using. Audio quality: This product is not a professional audio recording device. Operating temperature: 0 - 40 degree. Operating humidity: 20% - 80%, this product is not waterproof so don not get it wet or use it in a humid environment. Other matters: Do not use this product in strong magnetic or strong electric powered environments.

Folder View

select Folder menu, press the "Play&Pause" key goto folder menu, system display the "RECORD" folder and music files (if no music files, only display "RECORD" folder), select "RECORD" folder, press the "Play&Pause" key goto submenu, all recorded sounds are store in this folder, select a file press the "Play&Pause" key to play.

FM Radio

Before use FM radio function, you must insert a 3.5 plug earphone into this device, then select "FM Radio" menu, press the "Play&Pause" key goto radio interface, refer the right diagram:

Auto tune
Manual tune
Start FM radio recording
FM Recording Stations
Tuner Region
Save
Clear Station



1. Auto tune: This interface is auto search the FM bands, when it finished searching will display the station for select to listen.
2. Manual tune: this interface is manual adjust the FM bands, press the "Vol+", "Vol-" to change the frequencies
3. Start FM radio recording: start recording the FM radio band voice and save it for review
4. FM Recording: display recorded FM radio files, select to play or delete the files.
5. Stations: goto radio listen interface, refer the right diagram: Press "Previous" or "Next" key to change the saved station, press the "Vol+", "Vol-" key to adjust the voice volume,
6. Tuner Region: change the radio region to common band, Japan band or European Band
7. Save: browse saved station
8. Clear Station: delete the selected station, select "Yes" or "No" to confirm.

E-Book

Select E-book menu, press the "Play&Pause" key goto E-Book interface, system will display e-book files, if no file, system will display "Empty Disk" and return to main menu, select the file and press the "Play&Pause" key to start read, during read, press "Power On/Off" key to return to up level menu.
Note: the E-Book format only support TXT format, you must convert the file to correct format before copy to this device.

Setting

Selected the Setting menu, press the "Play&Pause" key goto setting submenu, system display setting interface, refer the right diagram: Shutdown setting / Display settings Date and time / Language/Language Password Set / Tools System / Format device Factory settings / Exit Setting

1. Shutdown setting

a. Power Off: Select OFF, 1 Minute, 3 Minute, 10 Minute or 30 Minute
b. Sleep timer: Close sleep timer, Set sleep timer: set the sleep time from 0 minute to 99 minutes

2. Display settings

a. Brightness: press the "Vol+", "Vol-" key to adjust the brightness
b. Backlight timer: select 10s, 20s, 30s or always on

c. Screensaver: select None or Digital clock, when you selected Digital clock, when the device no operate over 30 seconds will display digital clock, refer the right diagram:



3. Date and time:

a. Time settings: Set time format: select the format: "12-hours" or "24-hours", Set time: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set hours and minutes

b. Date settings: Set date format: select the format "DD MM YYYY", "MM DD YYYY" or "YYYY MM DD", Set date: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set "YYYY", "MM" and "DD", "YYYY" for year, "MM" for month, "DD" for day.

4. Language/Language: system offers 25 language for select, please choice your own language and press the "Play&Pause" key to confirm.

5. Password Set:

a. Password Switch: select Password Off or Password On
b. Password Set: system go set password interface, refer the right diagram: press the "Vol+", "Vol-" key to adjust the value, press "Previous" or "Next" key to set password ground 1, 2, 3, press the "Play&Pause" key to confirm.

Note: once the password set, every time open the device or connect to computer must input password, the operate is same as above.



6. Tools:

a. Calendar: system goto display calendar interface, refer the right diagram:
b. Stopwatch: system goto stopwatch interface, refer the right diagram: system can record 5 records simultaneously, press the "Previous" or "Next" key to select 1 - 5 record, press the "Play&Pause" key to start, press again to stop.

c. Alarm:

Alarm on/off: set alarm off or alarm on
Alarm time: set alarm hours and minutes
Alarm cycle: set alarm Once, Daily or Work Day
Alarm music: set Ring embedded or Music in flash
Alarm volume: press the "Vol+", "Vol-" key to adjust the volume

7. System: system display player information or disk space
8. Format device: system display "YES" or "NO" to confirm format the device

