



## Voice Recorder User Manual VR960

**Button Functions**  
**STOP:** stop play  
**REC & MUSIC:** exchange recording files or music  
**BACK:** back to previous level menu  
**MODE:** change playback mode  
▶: play, confirm and pause  
▶: next / fast forward  
◀: previous / rewind  
▲: up / volume +  
▼: down / volume -  
**T-MARK:** bookmark a label for quickly go to the location.  
**DELETE:** delete recorded files or music

**Quick Start**  
**Power ON:** Move the power switch to ON position, the device power on, the screen displays the main menu  
**Voice Recording:** Move the mode switch to REC position, system goes to the recording interface  
**Playback:** Move the mode switch to view position, system goes to the play menu

